


Power Sources

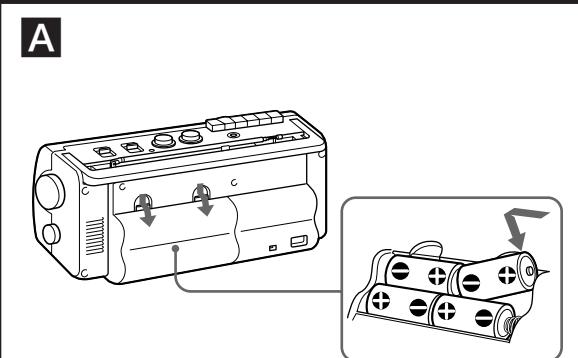

Batteries (see Fig. A)

Insert four R20 (size D) batteries.

Notes

- The player cannot be operated on batteries when the mains lead is connected to the player.
- When the OPR/BATT indicator grows faintly, replace all the batteries with new ones.

House Current (see Fig. B)

Connect the supplied mains lead to the AC IN jack.

Note

For critical recordings, operating the player on AC power is recommended.

Adjusting the voltage (see Fig. C)

Be sure to set the VOLTAGE SELECTOR (on the rear) to your local power supply before connecting the mains lead.

For customers supplied with an AC plug adaptor

Use it if the plug of the mains lead does not fit your mains.

Piles (voir fig. A)

Insérez quatre piles R20 (format D).

Remarques

- Le lecteur ne peut pas fonctionner sur les piles tant que le cordon d'alimentation secteur est raccordé.
- Quand le voyant OPR/BATT luit faiblement, remplacez toutes les piles par des neuves.

Courant secteur (voir fig. B)

Réglage de la tension (voir fig. C)

Ajuste de la tensión (consulte la figura C)

Quand un adaptateur secteur de fiche est fourni

Para los clientes a los que se les haya suministrado adaptador de enchufe de alimentación de CA

When the tape reaches the end

To locate a desired position (CUE/REVIEW)

For private listening

When the player is in use

Pendant le fonctionnement du lecteur

Sources d'alimentation

Fuentes de alimentación

Playing a Tape

Lecture d'une cassette

Reproducción de una cinta

Listening to the Radio

Ecoute de la radio

Radiorrecepción

Recording

Enregistrement

Grabación

1

2

3

4

A

1

2

3

A

1

2

3

A

1

2

3

A

1

